



# Fridge Speaker Function

Model **HUS-BC70B-BTS**

## Basics

- Unit accepts Blue Tooth Connection, USB and MicroSD card.
- File types supported are MP3, WMA, WAV & FLAC.

## CONTROLS



### POWER button

**Turn on** - Short Press (1sec) to turn the speaker on. Circle will glow SOLID WHITE in standby mode.

**Turn off** - Press and hold for 3-4 seconds. When off, the circle will no longer light up.



### MODE button

**Basics** - Short Press (1sec) will switch the speaker between any available modes

#### Bluetooth Mode



To switch from Standby mode to Bluetooth mode, short press(1sec) the mode button.  
Circle on power button will now *FLASH BLUE* slowly, until connected.

#### Bluetooth Connection



To connect your Bluetooth player, search for '**FROTHY**' as the device, and pair.  
Circle on the power button will glow SOLID BLUE, and speaker will beep once, when connected.  
*Speaker will now automatically connect each time it is turned on, and Bluetooth mode is selected.*

#### USB Mode



When a USB drive is inserted, the speaker will automatically switch to USB Mode.  
Circle on power button will glow SOLID ORANGE when in USB mode.  
*Alternatively, if a USB drive is already installed, short press mode button until USB mode is selected*

IMPORTANT NOTE: USB Mode does NOT support playback via phone/device when connected by USB cable. However the USB port is powered, so will charge your phone or device when connected.

#### MicroSD Mode



When a MicroSD drive is inserted, the speaker will automatically switch to MicroSD Mode.  
Circle on power button will glow SOLID GREEN when in MicroSD mode.  
*Alternatively, if a MicroSD drive is already installed, short press mode button until MicroSD mode is selected.*

IMPORTANT NOTE: Mode will not change from Bluetooth, if a USB and/or MicroSD are not inserted.



### PLAY/PAUSE button

Short press (1sec) to play or pause the music.

IMPORTANT NOTE: A long 3-4 second press will UNPAIR Bluetooth mode.



### VOLUME UP and VOLUME DOWN buttons

Short press or tap to turn volume up or down as desired.



Long press and hold will also change volume.

IMPORTANT NOTE: Speaker will beep once maximum volume has been reached.



### NEXT SONG and PREVIOUS SONG buttons



Short press or tap, to select previous or next track/song as desired.