



OPERATING INSTRUCTIONS

PG-65A

CAN COOLER



BAR FRIDGES
Cooling the Beers of a Nation Australia

Please read these instructions completely before operating the units.

PRODUCT INTRODUCTION:

Cylinder Refrigerator is our special design for the drink manufacturers and distributors. The product is a new unique design with strong advertisement image promotion. Imported compressors with CFC free refrigerant are used, Fully foamed cabinet and cover door with ABS for beautiful look and efficient cool keep in.

The features of the products are high efficient, fast cooling, low noise, very convenient. It can be widely used for the refrigeration of drink and freshness of food by stores, family, special users.

And it is a very good brand image promotion for food and drink brands. It is a very unique commercial refrigeration product.

Commercial refrigeration display cooler.

Climate class : $32^{\circ}\text{C}\pm 2^{\circ}\text{C}$ on appliances of climatic class 0,1,2,3,4,6 or 8

$43^{\circ}\text{C}\pm 2^{\circ}\text{C}$ on appliances of climatic class 5 or 7

OPERATION PROCESS

- Temperature Control Indicator “0” - “7” shows the operation from weak cooling to strong cooling.
- If the Thermostat Knob is turned from left to right, while the Temperature Control Indicator is changed from “0” to “7”, the temperature inside the cabinet will go down. In normal condition, the temperature inside the refrigerating cabinet will be 0-10, but maybe under 0 after running long-time.
- In normal condition, please keep the Temperature Control Indicator at the position on “4” - “5” .
- If the Thermostat Knob is turned at the position “7” , (Turn maximumly from left to right), the cooler will be rapid cooling, and the compressor will keep continuous running.
- The Thermostat Knob can not be turned from “7” to “0”. Otherwise the thermostat will be damaged.

NOTICE:

1. Important! Allow the appliance to stand upright for at least 24 hours before connecting it to a mains outlet for the first time, so that the refrigerant can settle.
2. Please turn the power on and check whether the unit is running. About 30 minutes later, the temperature inside the cabinet will go down apparently. After confirming the cooler has been completely cooled down (It takes 2-3 hours to get the first time to cooling temperature), please put into the food.
3. It is not allowed to put into too much food at the same time.
4. Please let the hot food cool down to normal temperature before putting into the cooler. It may affect the freshness keeping and increase energy consumption.
5. Please keep certain space between food and food. Otherwise it will affect the cooling circulation.
6. Do not put ice cream into the cabinet, otherwise the ice cream may be turned soft or melt.
7. Do not keep the door opened for a long time in operation condition.
8. When the power is cut, please do not open the door frequently to avoid cool leakage. If the power is off for a long time, dry ice or cold-storage block can be put inside.
9. Do not touch the compressor by hand to avoid damage of burning.
10. While the unit is not used for a long time, please: Take out all the food and unplug the power cord; Open the door, clean the inside cabinet and wipe off the water.



CONTROL PANEL

11. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
14. Do not damage the refrigerant circuit.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
18. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
19. Warning: The lamp must not be replaced by the user! If the lamp is damaged, contact the customer helpline for assistance.
20. The A-weighted emission sound pressure level is below 70 dB(A).
21. The appliance shall be disconnected from its power source during cleaning or maintenance and when replacing parts.
22. Do not throw items onto the shelves and do not place items totaling more than 25 kg on each shelf. The shelf could fall down, possibly causing injury.

WARNING:

- Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

● Warning: Risk of fire / flammable materials.



Environmental Protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres. Refrigerants must be evacuated and disposed of by a qualified specialist in accordance with federal and local regulations before the appliance is scrapped.



Caution: Please keep the appliance away from fire or similar glowing substances before you dispose of it. Please remove the door before you dispose of the appliance.




Tip over hazard! Appliance may pose a tipping hazard when uncrating, installing or moving the appliance. Take appropriate safety precautions. Use of tip over restraints may only reduce (not eliminate) the tipping hazard. Never allow children to climb or hang on drawers, doors or shelves.



Crush or cut hazard! Keep clear when uncrating, installing, moving, or servicing the appliance.

ELECTRICAL DIAGRAM (Static)

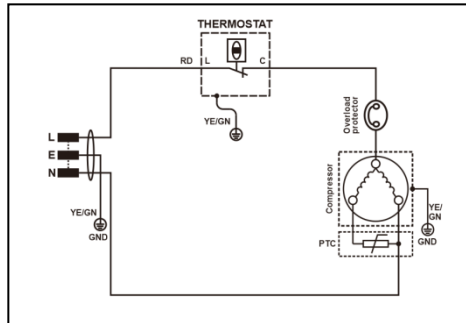

ELECTRICAL DIAGRAM (Ventilated)

