



**Model No.
BR9C
Operation Manual**



Contents:

1. General information	3
2. Technical data	5
3. Installation	5
4. Maintenance	6
5. Trouble shooting	6
6. Wiring diagram	7
7. Warranty	7

1. GENERAL INFORMATION

1.1 Foreword

The purpose of this document is to provide important information regarding the installation, use and maintenance of the cooler.

Before any operation, you should read carefully the information contained in this manual. The manufacturer assumes no liability for parts or labour coverage for component failure or other damages resulting from improper usage, installation or failure to clean and / or maintain product as set forth in these instructions.

1.2 GENERAL USE



The cooler is not completely 100% designed for external (outdoor) placement or environments that subject it to the actions of atmospheric agents (rain, direct sun light). It's tropical rating means it will chill and work, but cannot be in direct sunlight or weather.

The manufacturer is not responsible for damages resulting from the improper use of the product.

1.2.1 CHILDREN

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not Store explosive substances such as aerosol cans with a flammable propellant in this appliance. Don't store flammable liquids near unit that may omit vapour.

Unplug unit when not in use and also when maintenance and cleaning is taking place.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




Caution: risk of fire.

SAFETY

- Do not pull plug directly from socket without turning 'OFF' first
- Do not try to access unit electrics unless authorized to do so and unless unit is "OFF" and "UNPLUGGED"
- Do not rest heavy items (including the fridge) on the electrical lead

-Queensland installation/servicing requirement: Needs a Gas Repair Job (hydrocarbon refrigerants) if the appliance gas system is being opened or charged. Authorised technician needed.

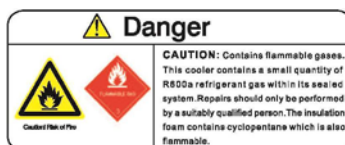

1.3 CONTROLLER SETTINGS

Temperature control can be adjusted if needed. Press 'Light' Switch once to turn the light on/off. Press and hold 'Light' button for 10seconds to enter temperature adjustment mode, the range is -10C > 50C, simply press to change and it will go back to normal display. Units are pre-set so you don't have to worry about temperature, the milk will be under 40C.



1.4 RESPONSIBILITY OF THE CUSTOMER

Ensure that the electrical outlet is connected effectively to earth (ground), suitable to provide the voltage indicated on the data plate. Make sure that the cooler is placed on a level surface.

2. TECHNICAL DATA

2.1 MATERIALS AND REFRIGERANTS

Interior or exterior surfaces that come into contact with the product are made of galvanized steel, aluminium or non-toxic plastic materials. The refrigerant used is approved by government regulations.

The type and quantity of the gas charged, in the refrigeration unit, is indicated on the data plate.

3. INSTALLATION

For safe proper operation, follow the manufacturers instructions reported in this section.


3.1 POSITIONING

IMPORTANT NOTE: Coolers that have been tilted **MUST** remain in the upright position for 24 hours prior to plugging in the cooler, the cooler must be placed in an adequately ventilated room. Keep away from heat sources, such as radiators or air conditioning pipes. Allow free air circulation to the refrigerator unit.

*If installing in cabinetry situation and not 'free standing', ensure one of the following pics is followed.

****Next PAGE**

Any **Non Front Venting Compressor units** along with all **Hotel/Motel Mini Bar Units** need a special install that is 100% for sure. The diagrams below give you an idea of different ways to vent these in order to ensure we create that 'chimney effect' to allow hot air that has built up to disburse. The important things to note here are that each 'actual vent', needs app 200cm² of size, so 20cm x 10cm = 200cm² as a minimum. Please note that with unit installs where fridge needs vent in rear floor area (example A, B, E and F) the hole needs to be clear for up to 8-10cm of the 'depth' of fridge. So the feet stop about where hole starts but it's clear under the rear part of fridge. This is because units have all the working parts in rear 10cm of the fridge, all the heat is built up right there. See how platform is 'shorter than fridge' so air rises through rear.

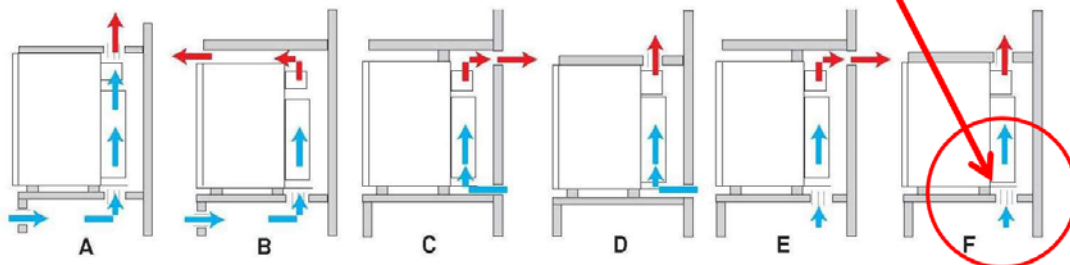

3.1.1 Cooler Levelling: To provide the best performance the cooler must remain level.

3.2 ELECTRICAL CONNECTION

WARNING DO NOT USE EXTENSION CORDS

The cooler works on single-phase voltage (220-240V/50Hz) power supply. To switch on the cooler, insert the plug into the outlet.

Ensure that: .

When the cooler is operating, check that the supply voltage is not dropping or increasing under/over +10% the rated voltage (195 Volts to 253 Volts)

*Ensure the cooler is connected to correct voltage prior to plugging it in; there is a description to identify the correct voltage on rear of the cooler.

*Avoid any water dropping or leaking into, or on top of the cooler. It could cause damage to the internal workings and is potentially dangerous.

*Danger-Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost refrigerator. Do not puncture refrigerant tubing.

*Danger-Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not puncture refrigerant tubing. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.

The manufacturer is not responsible for damages or accidents arising from the misuse or disregard of electrical laws relevant to the country where the cooler is used.

4. MAINTENANCE

- Before cleaning the cooler always remember to unplug it.
- Unplug the cooler at the electrical outlet; never pull the service cord.
- Do not use sharp objects for cleaning.
- Clean the inside cabinet of cooler with a clean damp cloth or with neutral soap. Avoid damage by never using abrasive or flammable cleaning products.
- Clean the condenser at least once a month with a vacuum cleaner or a brush to eliminate the dust accumulation. This is located at rear bottom and is the big wire part
- Do not wash the cooler with direct or high pressure water jets.
- Clean door seal annually using clean cloth and eucalyptus oil.

5. TROUBLE SHOOTING

Often problems that occur during normal operation can be resolved without the assistance of a specialized technician. Before calling the technical assistance, verify the following:

a) The appliance does not operate.

- Check that the plug is correctly inserted into the electrical outlet.
- Verify that there is voltage at the electrical outlet (Use another Appliance in same socket)

b) The product is too warm.

- Check the setting of the thermostat. (See 1.3 Testing Section)
- Check the closing of the door, and ensure door gasket seals.
- Check that the interior fan is operating, and not blocked.
- Check and clean the condenser located at rear bottom section near compressor


c) The appliance is excessively noisy.

- Verify the equipment is level.
- Ensure that the equipment is not touching other equipment that could cause vibration, like piping touching metal cover or other parts.

Prepare to answer the following:

- The type of problem: (electrical, mechanical)
- The model, code and serial number of the cooler can be found on the manufacturer label attached to the interior wall of the cooler. See Section 7 For Warranty Information.

6. WIRING DIAGRAM

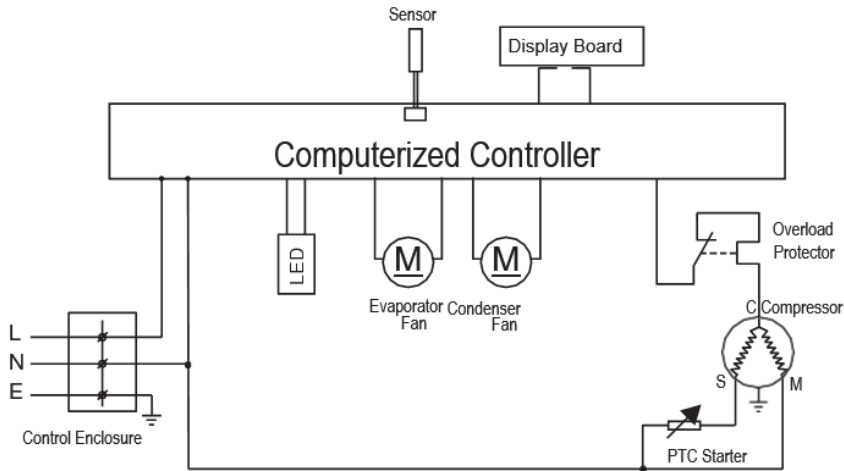

7. WARRANTY

Refer to your **WARRANTY STATEMENT** that arrived with your Tax Invoice, it explains all that is needed. The hotline for warranty is 1300 170640 (9AM < 4:30PM Mon-Fri), if there is no answer leave a message and it will be attended to within 24Hrs.

You can always go to this link to lodge a claim also, where basic questions need to get answered. <https://www.bar-fridges-australia.com.au/making-a-warranty-claim.html>

Bar Fridges Australia has a great reputation for back up service, so please don't panic if problems arise, it will be fixed.

"Thank you for choosing Bar Fridges Australia as supplier of your Glass Door Bar Fridge"



Postal: P.O Box 166, Sebastopol, Vic, 3356

Warehouse: 40 Production Drive, Alfredton, Vic, 3350

Ph: 03 53376399 Fax: 03 53376499 Service **1300 170640**

Email: sales@bar-fridges-australia.com.au Web:

www.bar-fridges-australia.com.au

Golden Bear Enterprises T/As Bar Fridges Australia ABN 13 101 612 239