

7. WARRANTY

Refer to your **WARRANTY STATEMENT** that arrived with your Tax Invoice, it explains all that is needed. The hotline for warranty is 1300 170640, if there is no answer leave a message and it will be attended to within 24Hrs.

You can always go to this link to lodge a claim also, where basic questions need to get answered. <https://www.bar-fridges-australia.com.au/making-a-warranty-claim.html>

Bar Fridges Australia has a great reputation for back up service, so please don't panic if problems arise, it will be fixed.

"Thank you for choosing Bar Fridges Australia as supplier of your

Glass Door Bar Fridge"



Postal: P.O Box 166, Sebastopol, Vic, 3356

Warehouse: 40 Production Drive, Alfredton, Vic, 3350

Ph: 03 53376399 Fax: 03 53376499 Service 1300 170640

Email: sales@bar-fridges-australia.com.au Web: www.bar-fridges-australia.com.au

Golden Bear Enterprises T/As Bar Fridges Australia ABN 13 101 612 239


BR125C (SK135) 170103GB-V2



Model No. SK135 Operation Manual



6. WIRING DIAGRAM

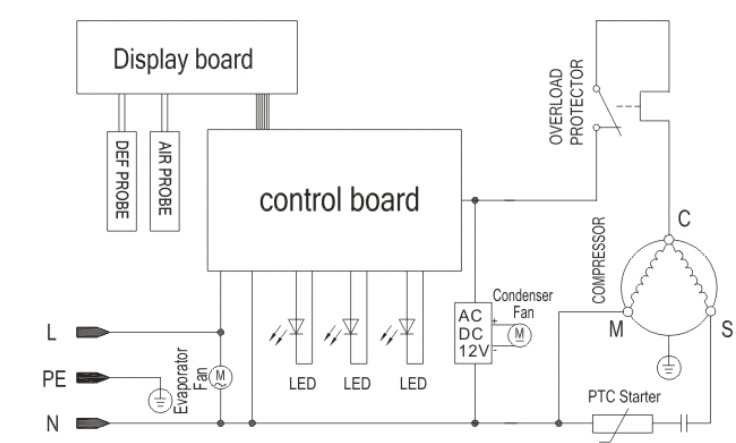

Contents:

1. General information	2
2. Technical data	5
3. Installation	5
4. Maintenance	7
5. Trouble shooting	7
6. Wiring diagram	8
7. Warranty	9

1. GENERAL INFORMATION

1.1 Foreword

The purpose of this document is to provide important information regarding the installation, use and maintenance of the cooler.

Before any operation, you should read carefully the information contained in this manual.

The manufacturer assumes no liability for parts or labour coverage for component failure or other damages resulting from improper usage, installation or failure to clean and / or maintain product as set forth in these instructions.

1.2 GENERAL USE




The cooler is only indoor use .The cooler is not completely 100% designed for external (outdoor) placement or environments that subject it to the actions of atmospheric agents (rain, direct sun light). It's tropical rating means it will chill and work, but cannot be in direct sunlight or weather.

The manufacturer is not responsible for damages resulting from the improper use of the product.

1.2.1 CHILDREN

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Queensland installation/servicing requirement: If Needs a Gas Repair Job (hydrocarbon refrigerants) a qualified technician is needed if the appliance gas system is being opened or charged.

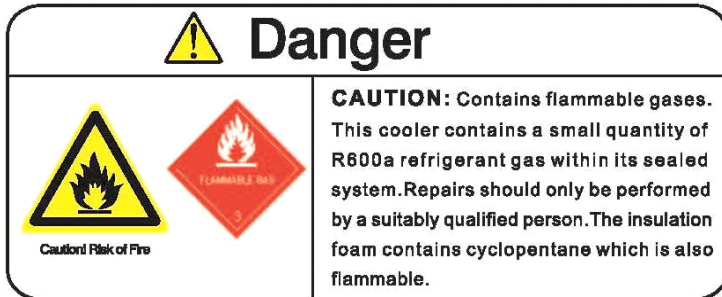

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

(For EU) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and

4. MAINTENANCE

- Before cleaning the cooler always remember to unplug it.
- Unplug the cooler at the electrical outlet; never pull the service cord.
- Do not use sharp objects for cleaning.
- Clean the inside cabinet of cooler with a clean damp cloth or with neutral soap. Avoid damage by never using abrasive or flammable cleaning products.
- Clean the condenser at least once a month with a vacuum cleaner or a brush to eliminate the dust accumulation. This is located at rear bottom and is the big wire part
- Do not wash the cooler with direct or high pressure water jets.
- Clean door seal annually using clean cloth and eucalyptus oil.

5. TROUBLE SHOOTING

Often problems that occur during normal operation can be resolved without the assistance of a specialized technician. Before calling the technical assistance, verify the following:

a) The appliance does not operate.

- Check that the plug is correctly inserted into the electrical outlet.
- Verify that there is voltage at the electrical outlet (Use another Appliance in same socket)

b) The product is too warm.

- Check the setting of the thermostat. (See 1.3 Testing Section)
- Check the closing of the door, and ensure door gasket seals.
- Check that the interior fan is operating, and not blocked.
- Check and clean the condenser located at rear bottom section near compressor

c) The appliance is excessively noisy.

- Verify the equipment is level.
- Ensure that the equipment is not touching other equipment that could cause vibration, like piping touching metal cover or other parts.

Prepare to answer the following:

- The type of problem: (electrical, mechanical)
- The model, code and serial number of the cooler can be found on the manufacturer label attached to the interior wall of the cooler.

This appliance climate class is 5

Test room climate class	Dry bulb temperature °C	Relative humidity%	Dew point °C	Water weight in dry air g/kg
0	20	50	9.3	7.3
1	16	80	12.6	9.1
2	22	65	15.2	10.8
3	25	60	16.7	12
4	30	55	20	14.8
5	40	40	23.9	18.8
6	27	70	21	15.8
7	35	75	30	27.3

3.1.1 Cooler Levelling: To provide the best performance the cooler must remain level.

3.2 ELECTRICAL CONNECTION

WARNING DO NOT USE EXTENSION CORDS

The cooler works on single-phase voltage (220-240V/50Hz) power supply. To switch on the cooler, insert the plug into the outlet,

Ensure that:

The electrical outlet must be provided with an efficient ground, the voltage and the frequency of the electrical line matches those indicated on the data plate. If unsure about the efficiency of the ground, have your electrical circuit checked by qualified technician.

When the cooler is operating, check that the supply voltage is not dropping or increasing under/over +10% the rated voltage (195 Volts to 253 Volts)

3.3 LED light replacement

- Unplug the cooler or cut off power before removing the light.
- Use screwdriver to take out the screw.
- Remove the LED light.
- Replace with a new LED board that is the same shape and size.
- Install the LED light and tighten screw.

If LED lights broken down, maintenance should be done by supplier.

The manufacturer is not responsible for damages or accidents arising from the misuse or disregard of electrical laws relevant to the country where the cooler is used.

knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Do not Store explosive substances such as aerosol cans with a flammable propellant in this appliance.

The appliance uses flammable insulation blowing gases. The disposal of the appliance shall be performed by authorized agent.

- Ensure the cooler is connected to correct voltage prior to plugging it in; there is a description to identify the correct voltage on rear of the cooler.

- The vent should not be blocked when fridge is working.

- Avoid any water dropping or leaking into, or on top of the cooler. It could cause damage to the internal workings and is potentially dangerous.

- Danger-Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost refrigerator. Do not puncture refrigerant tubing.

- Danger-Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not puncture refrigerant tubing.

- Caution-Risk of fire or explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.

- Caution-Risk of fire or explosion due to puncture of refrigerant tubing; Follow handling instructions carefully. Flammable refrigerant used.

- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- WARNING: Do not damage the refrigerant circuit.

- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- Pull power plug before each cleaning or maintenance operation or interrupt power supply!
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this unit. The fumes can create a fire hazard or an explosion.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Caution: risk of fire.

1.3 CONTROLLER SETTINGS

Perform the following steps to change the temperature setting:



Step 1: Press and hold the SET button for approximately 4 seconds until the display reads the factory pre set setting 4°C.

Step 2: To change temperature setting, press the ▲ (UP) or ▼ (DOWN) arrow key to select the desired setting

Step 3: Press the SET button again to accept new setting.

The electronic controller has been factory set to maintain temperature at approximately 4°C under normal ambient conditions.

LIGHT SWITCH (Lig): The LED lights can be turned on or off by depressing the “Lig” button.

MANUAL DEFROST: Press the “def” button until the cooler turns off. Unit will automatically return to operating mode when defrost cycle has been completed.

1.4 RESPONSIBILITY OF THE CUSTOMER

Ensure that the electrical outlet is connected effectively to earth (ground), suitable to provide the voltage indicated on the data plate. Make sure that the cooler is placed on a level surface.

2. TECHNICAL DATA

2.1 MATERIALS AND REFRIGERANTS

Interior or exterior surfaces that come into contact with the product are made of galvanized steel, aluminium or non-toxic plastic materials. The refrigerant used is approved by government regulations.

The type and quantity of the gas charged, in the refrigeration unit, is indicated on the data plate.

3. INSTALLATION

For safe proper operation, follow the manufacturers instructions reported in this section.

3.1 POSITIONING

IMPORTANT NOTE: Coolers that have been tilted **MUST** remain in the upright position for 24 hours prior to plugging in the cooler.

The cooler must be placed in an adequately ventilated room.

Keep away from heat sources, such as radiators or air conditioning pipes.

Allow free air circulation to the refrigerator unit.

The installation instructions furnished with the device indicate a clearance of 50mm at top, 25.4mm at the rear and 25.4mm at each side.

The ambient temperature must not be higher than 32°C (90°F) for optimal performance, units will however run in higher ambient temperatures.

The shelf can withstand the maximum load 20kg